



# MVario2

*System that measures  
atmospheric pressure*

**EN**

***User Manual***

# English

<b>1. Description and function .....</b>	<b>03</b>
1.1 The main function .....	03
1.2 Technical data .....	04
<b>2. Placement and connection .....</b>	<b>05</b>
2.1 Placement of MVario2 sensor .....	05
2.2 Connecting the MVario2 sensor .....	05
2.2.1 Connection with the JETIBOX terminal only .....	05
2.2.2 Connection with a receiver and Duplex transmitter module (non US) .....	06
2.2.3 Connection via Expander .....	06
<b>3. Setup .....</b>	<b>07</b>
3.1 Setup via JETIBOX .....	07
3.1.1 Menu Sensor MVario2 in the environment JETIBOX ..	07
3.2 Setup via DC/DS line transmitters .....	15
3.2.1 Main setup of the MVario2 sensor in the DS/DS transmitters .....	15
<b>4. Possible connection .....</b>	<b>22</b>
4.0.1 Connection to the JETIBOX .....	22
4.0.2 To the receiver input "Ext." .....	23
4.0.3 Connection via Expander EX .....	24

4.0.4	Connection to the receiver input (Ext.) with the option to connect more sensors .....	25
4.0.5	Connection directly to the receiver input (Ext.) with the F5J Limiter or ALES Limiter function activated .....	25
4.0.6	Connection to the receiver input (Ext.) with a possibility of logical levels detection and transmission of these values via telemetry .....	27

5.	Warranty, service and the technical support .....	28
----	---	----

# MVario2 system that measures atmospheric pressure

## 1 Description and function

English  
ver. 1.00

**MVario2** is a system that measures atmospheric pressure and using the obtained data it calculates the altitude above sea level, airspeed, and the rate of climb as well as the rate of descent. Changes in climb and descent rates are signaled as well. The sensor also alerts you if any alarm setting is exceeded.

The sensor data can also be transmitted via the Duplex system to the user.

The Duplex system takes advantage of the 2.4GHz band for communication. This system not only transmits control data to the model but also sends data from the model back to the transmitter. The telemetry data collected during operation is shown as actual, measured values in real time on either LCD screen of a connected JETIBOX or on the DC/DS JETI model transmitters.

### 1.1 The main function

- Measurement of altitude, pressure, and temperature.
- Very accurate and fast indication of climb and descent.
- Possible sound alarm signaling using a JETITx module (EU only) or JETIBOX profi.
- Possibility to be used as an Expander and to connect other sensors.
- Adjustable compensation of energy (TEK) via MSPEED EX sensor.
- Possibility to be used as an altitude switch in FAI F5J, ALES or ERES competition categories.
- The device is compatible with EX Bus protocol, i.e. it is possible to be configured comfortably via a special menu in DC/DS JETI model transmitters.
- Firmware updates.

## 1.2 Technical data

Technical data	MVARIO2
Dimensions	35x16x7mm
Weight with the cables	5g
Measuring accuracy of absolute/relative altitude	$\pm 9\text{m}/\pm 3\text{m}$
Resolution of measured height	0.1m
Typical noise ratio in height changes measurement	$\pm 0.05\text{m/s}$
Measurement range	$450 \div 1100\text{hPa}$
Operating temperature	$-10 \div 85^{\circ}\text{C}$
Supply voltage	$3.5 \div 8.4\text{V}$
Current consumption	15mA

The sensor enables an acoustic signal for the climb rate/descent rate or for exceeding of a preadjusted limit value. The acoustic signal consists of 4 different kinds (steps) for climbing and the same amount of steps for descending. The step width can be adjusted by the user. The climb signal consists of short interrupted tones, the descent signal consists of long permanent tones.

## ② Placement and connection

### 2.1 Placement of MVario2 sensor

**MVario2** is a very sensitive pressure sensor. Any change in pressure causes a change in the indicated altitude, climb rate, etc. The sensor should be mounted in the model in such a way that the sensor is not affected by air pressure flowing inside the model, but only by static atmospheric pressure. In other words, place the sensor in a model where it is only influenced by the static atmospheric pressure. For the most accurate altitude measurement, do not place the sensor near any components that generate heat during flight (e. g. near engines, motors or ESCs).

### 2.2 Connecting the MVario2 sensor

**MVario2** has an output marked **Ext.** and two programmable ports that are labeled as **Ext1/ESC In** and **Ext2/ESC Out**. Using the **Ext.** port of the sensor the data is transmitted to the receiver or to the connected JETIBOX, and it serves as a current supply as well.

#### *Possible functions of the programmable pins*

Ext1/ESC In	Ext2/ESC Out
Disabled	Disabled
Expander	Expander
ESC/Servo input	ESC/Servo output
Logical input No. 1	Logical input No. 2

#### 2.2.1 Connection with the JETIBOX terminal only

The three-wire cable with **JR** plug (black connector) can be plugged in directly into the **JETIBOX** (socket with the label Impulse, + - ). For current supply use the second input of the JETIBOX with the (+ - ) label, please apply a voltage of **3.5-8.4V**. When taking advantage of this type of connection you must be aware that no wireless data transfer exists and the measured data is

directly shown on the LCD screen of the JETIBOX. This connection type allows no alert signal generation and no acoustic signals of the vario, because the buzzer is a component of the transmitter module (non US) which is not connected in this case. Any alert signals are only shown on the JETIBOX LCD screen.

---

### 2.2.2 Connection with a receiver and Duplex transmitter module (non US)

Connect the three-wire cable of the **MVario2** sensor with **JR** plug (black connector) to the back side of the Duplex receiver (to the socket marked **Ext.**). Set the sensor input that is marked as **Ext1/ESC In** via the JETIBOX to the function of input servo pulses. Connect the input labeled **Ext1/ESC In** using an additional cable with a **JR** connector to a free receiver channel. This channel will then, together with the Tx module, function as the control of acoustic signaling for the climb and descent. E.g. the acoustic signaling will be disabled by the switch in one position and by putting the switch in the other position the **MVario2** starts indicating the climb/descent ratio. The **MVario2** module gets its current supply through the receiver. In order to adjust parameters of the **MVario2**, connect the JETIBOX to the transmitter module and switch on the receiver and the transmitter.

---

### 2.2.3 Connection via Expander

Connect the three-wire cable of the **MVario2** sensor with **JR** plug (black connector) to one of the **EXPANDER** inputs. Provide the **MVario2** input labeled **Ext1/ESC In** with the **JR** connector, configure it as a servo pulses input, and connect it to a free receiver channel. The expander enables connection of several telemetry sensors to one receiver. In such a case the **MVario2** sensor gets its current supply through the Expander and the Expander through the receiver.

---

## 3 Setup

### 3.1 Setup via JETIBOX

The parameters are set and the data is read out via **JETIBOX**. After connecting to the **MVario2** sensor, the welcome screen appears that shows the sensor identification and relative altitude in the first line. The second line contains the indicator and the value of vario (climb/descent rate in meters per second). The vario indicator consists of eight positions. The speed of climb and descent is indicated by the number of filled positions. The „>“ is one step of the climb. The „<“ symbol in one step of the descent. If the **D** button is pressed, you get to the **MVario2** main menu.

#### 3.1.1 Menu Sensor MVario2 in the environment JETIBOX

1. **MENUSENSOR: ACTUAL VALUES** - by pressing the **D** button (arrow down) select depicting of actual measured values

**Rel/Abs Altitude** – relative and absolute altitude. After switching on, the device creates a reference (zero) level of the relative altitude based on the absolute altitude. Relative altitude indicates the difference between the actual absolute altitude and the zero reference level.

**Vario, alternatively Vario/Compensat.** – depicts actual speed of the climb/descent in meters per second. Alternatively, in addition to the actual climb / descent rate, the value obtained using the **MSPEED EX** sensor after the compensation of total energy is depicted.

**Abs. pressure** – depicts actual atmospheric pressure in hPa (hectopascal).

**Temperature** – shows actual temperature of the sensor.

**ESC In/Out** – shows the value of the receiver channel that is connected to the appropriate Ext1/ESC In, respectively Ext2/ESC Out connector (in milliseconds). To display the correct values the



appropriate input and output needs to be configured in the settings of the sensor.

2. **MENU SENSOR: MIN/MAX** – by pressing the **D** button (arrow down) select depicting of extremes records that occurred during the measurements

**Vario MIN/MAX** – indicates the minimum descent rate and the maximum climb rate.

**Altitude MAX** – shows the maximum reached relative altitude.

**Temp MIN/MAX** – shows the minimum and maximum temperature of the sensor.

**FAI Altitude** – in **FAI F5J** mode the „**Start height**“ of the flight is depicted, which corresponds with the valid **FAI F5J** rules.

**Speed MAX** – maximum speed measured using a connected **MSPEED EX** sensor.

**Reset MIN/MAX** – manual reset of the maximums and minimums, followed by reinitialization of the altimeter. Pushing **R** and **L** arrows (right and left) together deletes the extremes of all measured parameters.

3. **MENU SENSOR: SETTING** – by pressing the **D** button (arrow down) you get to the basic setting of the MVario2 sensor.

**Device mode** – enables fast setting of the basic function of the sensor.

**See the available options below:**

- **Vario** – standard universal mode for most applications. In this mode it is possible to arbitrarily set the **Ext1/ESC In** and **Ext2/ESC Out** ports, it also enables the use of an **MSPEED EX** sensor to compensate the total energy.
- **F5J Limiter** – special mode for training flights of **FAI F5J** category. In this mode the **Ext1/ESC In** port serves as the throttle channel input, conversely the **Ext2/ESC Out** port is used as the output to connect an electronic speed controller.

- **ERES Limiter** – special mode for **ERES** type categories. In these categories the motor is automatically switched off after exceeding the set altitude or after elapsing specified motor time (whichever event occurs first).

The **ESC-In** port is the input port for connecting the throttle channel from the receiver. The **ESC-Out** port is the output port for connecting the controller.

- **ALES Limiter** – special mode for **ALES** type categories (*Altitude Limited Electric Soaring*). In these categories the motor is automatically switched off after exceeding the set altitude or after elapsing specified motor time (whichever event occurs first). The **Ext1/ESC In** port serves as throttle channel output from the receiver, conversely the **Ext2/ESC Out** port is used to connect the electronic speed controller.

**Ext1 Mode**, respectively **Ext2 Mode** – if the device is in the Vario mode, the **Ext1/ESC In** port, resp. **Ext2/ESC out** port can be configured to several functional alternatives:

- **Off (by default)** – the port has no function.
- **Expander** – it is possible to connect any sensor to the port (sensors using **JETIBOX**, **Duplex EX** and **EX Bus** protocols are supported). Detection of the **MSPEED EX** sensor presence is done automatically.
- **ESC/Servoln** – the port is configured as the servo impulses input from any receiver channel. Based on the value of the appropriate channel deflection it is possible to enable or disable generating the acoustic signals for climb/descent rate. These are further indicated by the transmitter module or by connected **JETIBOX profi**. This operation is valid for **Ext1/ESC In** port only.
- **ESC/ServoOut** – the port is configured as the servo impulses output. In the Vario mode there is the same deflection on the output as on the input of Ext1/ESC In, in other modes (F5J, ALES and ERES Limiter) this port serves as throttle channel control and

is set automatically. This option is valid for Ext2/ESC Out port only.

- **Log. input** – the port will be switched to the digital input mode. Detected value (log. 1 or log. 0) is then available through EX telemetry and e.g. in the DC/DS transmitters it is possible to assign any action on the basis of the sensor logical input.

Voltage threshold levels table	Voltage range
Log. 0	0 – 1V
Log. 1	1.9 – 3.3V

**Cut-off Altit.** – in the **ALES/ERES** mode this parameter sets the altitude where the motor is switched off (50 – 500m, default value 200/90m).

**Cut-off Time** – in the **ALES/ERES** mode this parameter sets the maximum possible time of the motor operation. After this period elapses, the motor is automatically switched off (1 – 120s, default value 30s).

**Motor off** – In the **ALES/ERES** and **F5J** modes it indicates the value of the throttle channel, which is understood as the switched-off motor. Exceeding this deflection (by default 1.1ms) starts countdown time for running motor.

**Vario sensitiv.** - influences the filtering of input data from the pressure sensor. The higher the sensitivity is, the faster the responses to the altitude changes are. Nevertheless it is possible that at the same time the level of indicated noise gets increased. Medium sensitivity is set by default.

**MSPEED Compensat** – determines the level of total energy compensation (TEK) by means of an **MSPEED EX** sensor. By default, the compensation is disabled. The value is available as a specific **EX parameter**. For proper function of the compensation it is necessary to switch the **Ext1** or **Ext2** port to the Expander mode and connect the **MSPEED EX** sensor to this port. The sensor is detected automatically. For initial setup we recommend the value of 50% and subsequent additional experimentation

depending on the flight tests conducted.

Proper setup of the total energy compensation is used to suppress the effects of control changes on the sound alarms. E.g. after pulling the elevator, climbing is not signaled although the altitude of the model increases. On the contrary, descending will still be indicated as when pulling the elevator the speed decreases. This brings the model to aerodynamically less favorable conditions.

**Round altitude** – permits or denies rounding the altitude values sent via **EX telemetry** and is possible to be displayed on the transmitter or the **JETIBOX profi**. Relative and absolute altitude round to full meters, so if the voice output is activated, the transmitter announces the actual altitude without the decimal part.

**Sealevel Press** – to calculate the absolute altitude the atmospheric pressure at the sea level is taken as a reference. To get the most accurate calculation of the altitude, set the current pressure in the area adjusted to the sea level. This parameter is not available in **F5J** and **ALES** modes.

**4. MENU SENSOR: ALARMS/VARIO** - by pushing the button **D** (downward arrow) you will get to the setup of particular alerts and to the sound indication of the **MVario2** sensor. If an adjusted parameter is exceeded, the LCD screen of the JETIBOX then shows alternately the original data and the matching alert in the second line of the main screen and the buzzer of the transmitter module emits the alert signal. The first tone is the revelation tone and the second tone beeps out the Morse code of the character representing the corresponding alert. If the alert is in position OFF, the given alert is switched off.

**Beep/Alrm Enable** – Using this parameter it is possible to disable all the acoustic signaling of the sensor. In case you use JETI Duplex transmitter module or JETIBOX profi, enable the sound signalization (*Beep/Alrm Enable = Yes*). Conversely if you use the

**DC/DS transmitters**, we recommend keeping the sound signaling disabled, as all the other settings (alarms, vario signaling) are carried out in the transmitter directly via EX parameters.

**Climb Sens., descent** – setting the sensitivity of the sensor, which defines the value of the indicator step in the initial screen and of the sound signaling step. The sensitivity is set separately for climb and descent. (E.g. to setup the sensitivity on 1m: If the vario indicator is fully filled in the main screen, the level of climb/descent is 4m/s and the sound signalization step is  $\pm 1$  m/s)

**Beep Period** – setting the time between the groups of tones in vario sound signaling. The number of tones corresponds with the change of climb / descent that appeared during this set period

**Trigger Level** – setting the value of input impulse length. If this level is exceeded, the rate of climb/descent is acoustically signaled. If the MVario2 input is not connected to a receiver channel, the acoustic signaling is enabled permanently. (We recommend connecting the input to the receiver channel that is controlled by a switch on the transmitter or by the channel controlling the throttle.)

**Vario Beep** – adjustment of one of the 4 modes of vario sound signaling. If the „**Yes**“ option is active, the sound signaling of both climb and descent is enabled. In „**On-Descent**“ only the sound signaling for the descent is active, and in „**On-Climb**.“ Only the sound signaling of the climb is active. In the „**Off**“ mode the sound signaling is disabled. These settings do not apply to the configured alarms, which are permanently enabled. (In case you want to be informed only about exceeding the set alarm, it is necessary to disable the vario signaling. We recommend not to have set alarms and vario signalization enabled at the same time.)

**Vario High Alarm** – adjustment of the signal representing high climb rate. If the value measured by the Vario exceeds the set value, the alert will be activated.

**Vario Low Alarm** – adjustment of the signal representing high descent rate. If the value measured by the Vario exceeds the set value, the alert will be activated.

**Beep Vario Alarm** – adjustment of one Morse code letter, which represents exceeding the set vario alarm by the sound tone from the DuplexTu transmitter module.

**Alti High Alarm** - adjustment of the signal representing the relative altitude. If the value of the relative altitude exceeds the set value, the alert will be activated.

**Beep Alti. Alarm** – adjustment of one of the Morse code letters, which represents exceeding the set altitude alarm by the sound from the DuplexTx transmitter module.

## 5. MENU SENSOR: EX PARAMETERS

**MVario2** offers following telemetry values to be displayed in the transmitter or in the JETIBOX profi:

No.	Designation	Description
	MVAR2	The name of the sensor
1.	Vario	Climb/descent indication with a resolution of 0.01m/s.
2.	Abs. Altit	Absolute altitude above the sea level with the resolution of 0.1m.
3.	Rel. Altit	Relative altitude above the reference level with the resolution of 0.1m.
4.	Air press.	Atmospheric pressure in hectopascals.
5.	Temp.	Temperature of the sensor.
6.	Servo out	The value of the output impulse for the servo or speed controller, in milliseconds.
7.	FAI altit	In the F5J Limiter mode the 'Start Height' of the flight is depicted here. The calculation is carried out according to the procedure described in the valid version of the rules.
8.	Com. Vario	Climb/descent indication with the use of the speed change compensation.
9.	Log Input1	The value of log. 1 or log. 0 detected on the Ext1/ESC In port.
10.	Log Input2	The value of log. 1 or log. 0 detected on Ext2/ESC Out port.
11.	Status	Coded device status. 0 ... Device initialization 1 ... F5J, ALES and ERES modes: waiting for the throttle idle position. 2 ... The device is ready 3 ... F5J, ALES and ERES modes: the engine is running 4 ... F5J and ERES mode: The engine is stopped and there is a countdown of 10 seconds running 5 ... F5J mode: FAI altitude ('Start Height') has been measured, ALES mode: the engine is switched off and the cut-off altitude has been measured

The parameters can be excluded from the EX telemetry protocol, so if needed, the unnecessary data will not be sent at all. Then, the display on neither the DC/DS transmitters nor the JETIBOX profi will show these parameters. If you disable some parameters, the other enabled data will be sent more frequently (but 100ms is the limit of the repetition period).

## 6. MENU SENSORU: SERVICE


**Factory Defaults** - by simultaneous pressing of arrows **R** and **L** (right and left) the factory settings of the **MVario2** are loaded.

## 3.2 Setup via DC/DS line transmitters

**MVario2** sensor can be easily configured via any transmitter of DC/DS line. If you switch the paired receiver to the **EX Bus** mode and you connect the **MVario2** to its **Ext.** port, the device will be detected automatically and then might be configured in the menu „**Model -> Device Explorer**“.

### Note:

*For proper function the transmitter version at least 2.20 (or newer) and the receiver version 3.14 (or newer) is necessary. Further, make sure that in the Devices folder of your SD card there is a configuration file **MVARIO2.bin**.*

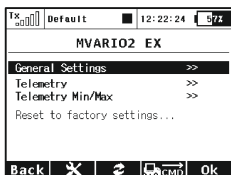

### 3.2.1 Main setup of the MVario2 sensor in the DS/DS transmitters

- 1. Device mode** – enables fast setup of the basic function of the sensor. *These possibilities are available:*
  - Vario** – standard universal mode for most of applications. In this mode it is possible to adjust **Ext1/ESC In** and **Ext2/ESC Out** ports arbitrarily. It is also possible to use the total energy compensation using the **MSPEED EX** sensor.
  - F5J Limiter** – special mode for training flights in the **FAI F5J** competition category. In this mode, the **Ext1/ESC In** port serves as the throttle channel input from the receiver, on the contrary, the **Ext2/ESC Out** port is used as the output connection for an electronic speed controller.



- **ERES Limiter** – special mode for **ERES** type categories. In these categories the motor is automatically switched off after exceeding the set altitude or after elapsing specified motor time (whichever event occurs first).

The **ESC-In** port is the input port for connecting the throttle channel from the receiver. The **ESC-Out** port is the output port for connecting the controller.

- **ALES Limiter** – special mode for the **ALES** type categories (**A**ltitude **L**imited **E**lectric **S**oaring). In these categories the motor is automatically switched off after exceeding the set altitude or after the elapsed specified motor time (whichever event occurs first). The **Ext1/ESC In** port serves as throttle channel output from the receiver, conversely, the **Ext2/ESC Out** port is used to connect an electronic speed controller.

**Ext1, resp. Ext2 modes** – if the device is in the Vario mode, the **Ext1/ESC In**, resp. **Ext2/ESC out** ports can be configured to several functional alternatives:

- **Off (by default)** – the port has no function.
- **Expander** – it is possible to connect any sensor to the port (sensors using **JETIBOX**, **Duplex EX** and **EX Bus** protocols are supported). Detection of the MSPEED EX sensor presence is done automatically.
- **ESC/Servoin** – the port is configured as the servo impulses input from any receiver channel. Based on the value of the appropriate channel deflection it is possible to enable or disable generating the acoustic signals for climb/descent rate. These are further indicated by the transmitter module or by connected JETIBOX profi. This option is valid for **Ext1/ESC In** port only.
- **ESC/ServoOut** – the port is configured as the servo impulses output. In the Vario mode there is the same deflection on the output as on the input of **Ext1/ESC In**, in other modes (**F5J Limiter**

and *ALES Limiter*) this port serves as throttle channel control and is set automatically. This option is valid for **Ext2/ESC Out** port only.

- **Log. input** – the port will be switched to the digital input mode. Detected value (log. 1 or log. 0) is then available through EX telemetry and e.g. in the DC/DS transmitters it is possible to assign any action on the basis of the sensor logical input.
- 

## 2. The limiter setup

is displayed in the **ALES/ERES Limiter** and **F5J Limiter** modes.

**Cut-off Altitude** – in the **ALES/ERES** mode this parameter sets the altitude where the motor is switched off (50 – 500m, default value 200/90m).

**Cut-off Time** – in the **ALES/ERES** mode this parameter sets the maximum possible time of the motor operation. After this period elapses, the motor is automatically switched off (1 – 120s, default value 30s).

**Motor off** – In the **ALES/ERES** and **F5J** modes it indicates the value of the throttle channel, which is understood as the switched-off motor. Exceeding this deflection (by default 1.1ms) starts the countdown time for running motor.

---

## 3. The vario setup

**Sea Level Pressure** – to calculate the absolute altitude the atmospheric pressure at the sea level is taken as a reference. To get the most accurate calculation of the altitude, set the current pressure in the area adjusted to the sea level. The current altitude will also be displayed. This parameter is not available in **F5J**, **ALES** and **ERES** modes.

**EX Sensitivity** – influences the filtering of input data from the pressure sensor. The higher the sensitivity is, the faster the responses to the altitude changes are. Note: as the sensitivity is

increased the potential for unwanted noise is also increased. Medium sensitivity is set by default.


**EX Round Altitude** – permits or denies rounding the altitude values sent via **EX telemetry** and is possible to be displayed on the transmitter or the **JETIBOX profi**. Relative and absolute altitude round to full meters, so if the voice output is activated, the transmitter announces the actual altitude without the decimal part.

**Generate JETIBOX Alarms** – enables or disables generating the alarms and acoustic indication directly from the sensor. This parameter serves just for the checkup, we recommend to keep the alarms disabled. If you enable the alarms (*Generate the JETIBOX alarms = YES*), it is necessary to set the relevant values and signal types using the built-in JETIBOX emulator.

**MSPEED Energy compensation** – determines the level of total energy compensation (TEK) by means of **MSPEED EX** sensor. By default, the compensation is disabled. The value is available as a specific **EX parameter**. For proper function of the compensation it is necessary to switch the Ext1 or Ext2 port to the Expander mode and connect the **MSPEED EX** sensor to this port. The sensor is detected automatically. For initial setup we recommend the value of 50% and subsequent additional experimentation depending on the flight tests conducted.



**Vario mode**

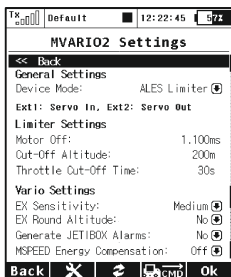


**ALES Limiter mode**

Proper setup of the total energy compensation is used to suppress the effects of control changes on the sound alarms. E.g. after pulling the elevator, the resulting climb is not signaled although the altitude of the model increases. On the contrary the descent will still be indicated, as when pulling the elevator the speed decreases. This brings the model to aerodynamically less favorable conditions.

## 4. Telemetry

Here is a quick view of the possible measured values available to the sensor.

The **Enabled in** EX parameter sets that the given variable will be available to the transmitter as EX telemetry. If needed, unwanted parameters can be disabled. Thus it will not be possible to assign them to the telemetry screen of the transmitter and they will not be sent either. The transmitters support a limited number of sensor variables and in this way you get the space for connecting more sensors.

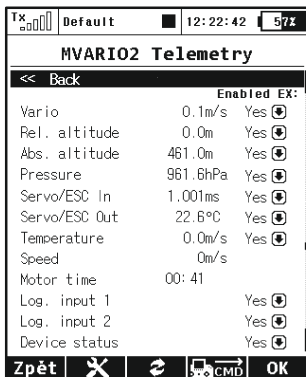

If some parameters are disabled, the remaining ones will be sent more frequently (but 100ms is the limit of the repetition period).

## 5. Measured minimums and maximums

In this menu you can display measured minimum and maximum values. These values can be easily reset using „**Clear and reinitialize now**“. After confirmation the sensor is reinitialized, the extremes are reset and the altitude relative to the current position is also reset.




**Note:** In the F5J mode the FAI altitude will also be reset (in case it was measured) and the device is immediately ready for a new flight. This is very suitable for training flights, as after landing you simply erase the minimum and maximum values using the switch and the model is ready again without a need for switching-off.



Using the menu item „**Clear MIN/MAX values**“ you can assign any control or switch that will be used to clear minimums and maximums in the sensor.

## 6. Setting the vario signaling in the transmitter

The sound signaling of the **MVario2** can be easily set in the **DC/DS transmitters**. Switch on the receiver and connect the **MVario2**. All the EX parameters will be automatically detected by the transmitter. In the menu „**Timers/sensors -> Vario**“ change the Mode parameter to „**EX Value**“. This enables the acoustic signaling of the climb/descent rate based on the EX value. Further on it is possible to assign any control that will start the sound signaling (in the screenshot, the two-position control Sc is selected).

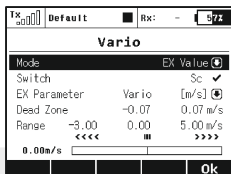

As the EX parameter choose a value that will be indicated. In MVario2 these two parameters are available:

- **Vario** – to indicate a simple altitude change,
- **Com. vario** – select this option if the total energy compensation is enabled using **MSPEEDEX** sensor.

Adjust the ranges and the dead zone for the first flight e.g. shown by the figure, in later flights you can experiment with these parameters as you wish. The dead zone indicates the area around the central value of the range, in which there will be no notification of any altitude. Minimum and maximum range describes the total available climb/descent rate of the model, i.e. in what area the acoustic tone will be changed proportionally.

## 4 Possible connections

### 4.0.1 Connection to the JETIBOX

In this case it is necessary to use the power supply of 5 to 8.4V, e.g. the receiver battery. The three-wire cable with the JR connector (black connector) is connected to the JETIBOX (the connector labeled Impulse, + -).

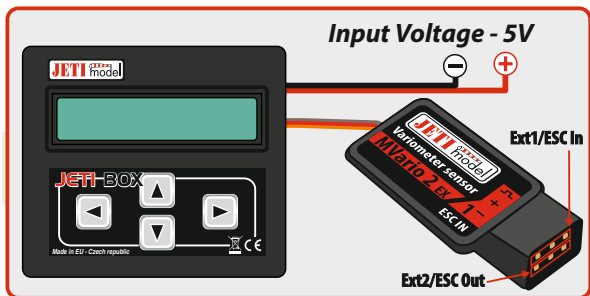


Fig. 1: Connection of the MVARIO2 to the JETIBOX

## 4.0.2 To the receiver input "Ext."

In this connection it is possible to connect one MVario2 sensor, which is powered from the receiver. The three-wire cable with the JR connector (the black connector) is connected to the Duplex receiver (**Ext. input**). Optionally, you can connect a free receiver channel with the **Ext1/ESC In** port of the MVario2 sensor using the three-wire cable. This channel connected to the Tx module will then be used to control the acoustic climb/descent indication. E.g. the switch in one position disables the acoustic signaling, switching to another position makes the vario indicate the climb/descent rate.



Fig. 2: MVario2 connected to the receiver



### 4.0.3 Connection via Expander EX

In this case it is possible to process data from more sensors at the same time (according to the Expander type). The sensors are powered via the Expander. The three-wire cable with the JR connector (the black connector) is connected to any Expander port. Optionally you can connect free channel of the receiver with the **Ext1/ESC sensor** of the MVario2 using the three-wire cable.

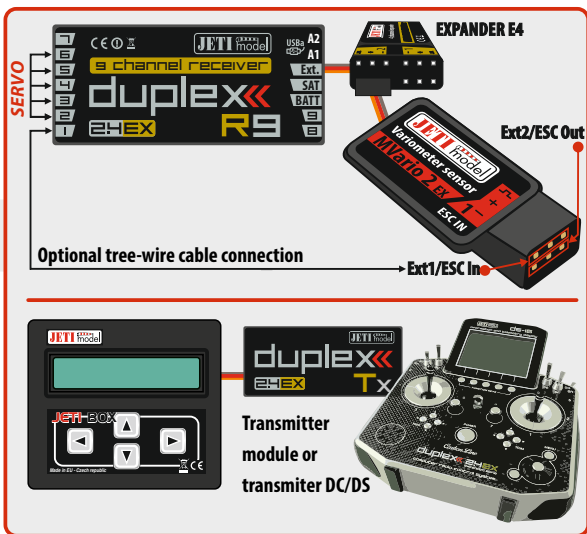


Fig. 3: MVario2 connected via Expander

#### 4.0.4 Connection to the receiver input (Ext.) with the option to connect more sensors.

The three-wire cable with the **JR** connector (the black connector) is connected to the Duplex receiver (*input labeled Ext.*).

**The MVario2 sensor is configured this way:**

The device mode (Vario), **Ext1** mode (Expander), **Ext2** mode (Expander). Now you can connect other JETI model sensors directly to free MVario2 ports. MVario2 is powered from the receiver and other sensors are powered from the MVario2.



Fig. 4: MVario2 as the Expander

#### 4.0.5 Connection directly to the receiver input (Ext.) with the F5J, ALES or ELES Limiter function activated.

The three-wire cable with the **JR** connector (the black connector) is connected to the Duplex receiver (*the input labeled Ext.*).

**The MVario2 sensor is configured this way:**

The device mode (F5J, ALES or ELES Limiter), **Ext1** mode (Servo input), **Ext2** mode (Servo output). Now bring the throttle control channel from the receiver to the **Ext1/ESC In** port using the three-wire cable with the **JR** connectors. Connect the speed controller. Here two types of connection are possible, depending on the fact if the connected controller has the circuit for voltage stabilization

(BEC) or not. **In case you use a controller with a BEC circuit, we strongly recommend placing the MVARIO2 in a location where there is no possibility of random tearing out of the wires from the device. Or it is advisable to bridge the power supply with a special cable that will bring the power directly from the controller to the receiver**

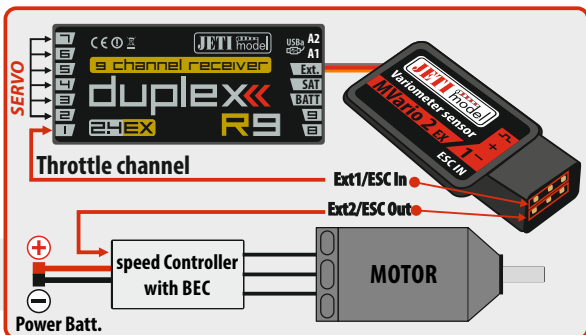


Fig. 5: MVario2 connected to the receiver input

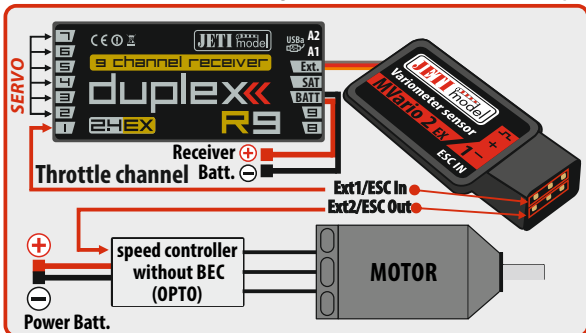


Fig. 6: MVario2 connected to the input of the receiver with the receiver battery

#### 4.0.6 Connection to the receiver input (Ext.) with a possibility of logical levels detection and transmission of these values via telemetry.

The three-wire cable with the JR connector (black connector) is connected directly to the Duplex receiver (*input labeled Ext.*).

**The MVARIO2 sensor is configured this way:**

The device mode (Vario), **Ext1** mode (Logical input), **Ext2** mode (Logical output). MVario2 ports are now possible to be connected according to the picture, so that on the signal (yellow) cable the logical level of the input voltage will be detected. Based on this value, it is possible to report the alarm in the transmitter or carry out another action.

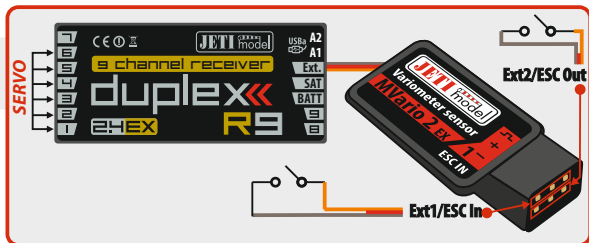


Fig. 7: MVario2 connected to the receiver input with a possibility to detect log. levels and data transmission via telemetry

#### Note:

**Ext1 and Ext2 ports modes are possible to be combined arbitrarily, e.g. it is possible to have a sensor connected to the Ext1/ESC In port and the Ext2/ESC Out port will then serve as a logical input.**

## **5 Warranty, service and the technical support**

### ***Warranty and service***

This product is covered by warranty for 24 months after the day of purchase provided that it has been operated in accordance with these instructions at the specified voltage and is not mechanically damaged. When claiming warranty repairs for the product, always attach a proof of purchase. Warranty and post-warranty service is provided by your dealer or the manufacturer.

### ***Technical support***

In case you are not sure about the setup or some functions of the product, do not hesitate to contact our technical support. You can contact either your dealer, or directly the manufacturer

***JETI models s.r.o..***

For further information see our webpages **[www.jetimodel.com](http://www.jetimodel.com)**.

**We wish you successful flying with the products of:**

**JETI model s.r.o. Příbor, [www.jetimodel.com](http://www.jetimodel.com)**

---



## Declaration of Conformity

**Issues name & addres:**

JETI model s.r.o.

Lomena 1530, 742 58 Pribor

**Object of the declaration:**

Products: **Variometer**

Trade name: **MVario2**

Model: **MVario2**

Country of origin: **Czech republic**

**The object of declaration described above is in conformity with the requirements of the following EU legislations and harmonized standards:**

ČSN EN 61000-6-1:2007, ČSN EN 61000-6-3:2007+A1:20011

Electromagnetic compatibility: 6440-454/2008 6440-538/2008

Signed for and on behalf of:

A handwritten signature in black ink, appearing to read "Tomáš Klesnil".

**Tomáš Klesnil**  
production Manager

**ENGLISH****Information on Disposal for Users of Waste Electrical & Electronic Equipment (private households)**

This symbol on the products and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste.

For proper treatment, recovery and recycling, please take these products to designated collection points, where they will be accepted on a free of charge basis. Alternatively, in some countries you may be able to return your products to your local retailer upon the purchase of an equivalent new product.

Disposing of this product correctly will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

**For business users in the European Union**

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

**Information on Disposal in other Countries outside the European Union**

This symbol is only valid in the European Union.

If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.



**JETI model s.r.o.**  
**Lomená 1530, 742 58 Příbor**  
**Czech Republic**

**[www.jetimodel.com](http://www.jetimodel.com)**  
**[info@jetimodel.cz](mailto:info@jetimodel.cz)**